



Isolated power systems for operating rooms from Bender

Proudly incorporating:



Trust Bender for retrofits, replacements, and service for isolated power systems, servicing your local area.

- Hospital-grade isolation transformers and line isolation monitors (LIMs)
- Incorporates Square D™ brand components from Schneider Electric (circuit breakers, HDL breakers, QOB)
- UL listed NFPA 99 power system
- High-quality panels you've always experienced, now through your OEM, Bender

Isolated power panels monitor ungrounded power systems and protect against electrical shock, while offering:

- Hinged trim and backbox system
- Modular panel system including:
 - One interior and line isolation monitor (LIM) for all kVA and voltage combinations
 - Transformer and main breaker kit
- Interior designed for standard and duplex solutions



Isolated Power Panel

Line isolation monitors oversee the isolated power system and display the total system hazard current, while offering:


- Real time, in-room hazard current notifications
- On-board data-logging for faster troubleshooting
- Prevention of power loss in hazardous situations



Line Isolation Monitor (LIM2010)

Additional Bender solutions include:

- Ground-fault location system
- Current monitoring system
- Communications gateway
- Monitoring and control station
- Remote indicator
- Field services

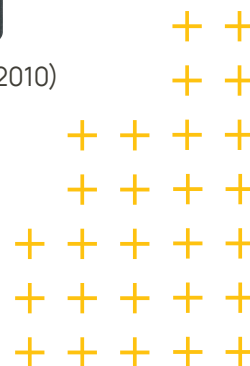

Bender Inc.

800.356.4266 | info@benderinc.com
www.benderinc.com



14.33H.REV.1 / 03.2025