

# LINETRAXX® RCM410R

# Single-channel AC and pulsed DC sensitive residual current monitoring device for AC systems





### Device features

- Alternating and pulsing current sensitive residual current monitoring device according to DIN EN IEC 62020-1, Type A
- Root mean square measurement (RMS)
- Residual operating current: 10 mA...30 A (42...70 Hz)
- Prewarning: 50...100 % of residual operating current
- Supply voltage DC 24 V, optional AC/DC 100...240 V (RCM410R-2 only)
- LED-strip measured value display
- Adjustable response delay
- Alarm relay (designed as changeover contact)
- N/C or N/O operation and fault memory behaviour selectable
- RS-485 with Modbus RTU
- Continuous CT-connection monitoring
- NFC interface for device parameter setting with the device energised or de-energised

### Intended use

The device RCM410R is intended for use in conjunction with the specified measuring current transformers for AC and pulse current sensitive residual current measurement in accordance with DIN EN IEC 62020-1.

The area of application is the monitoring of residual currents  $I_{\Delta}$  for preventive maintenance in TN, TT and IT systems with  $I_{\Delta} \leq 50$  A rms, whereby  $I_{\Delta}$  is measured in accordance with its intended use in a range of  $f = 42 \dots 70$  Hz.

The devices are designed for operation in control cabinets or in a similarly protected environment.

The specifications in this manual must be observed for proper operation. Any other or additional use is considered improper.

### Functional description

After the supply voltage  $U_s$  is applied and the recovery time  $t_b$  has elapsed, the start-up delay  $t$  starts. No alarms are signalled during the start-up delay  $t$ . The residual current detection is performed by an external current transformer. If the measured value exceeds the prewarning value and/or the residual operating current, the response delay  $t_{on}$  starts.

After  $t_{on}$  has elapsed, a prewarning or a main alarm is output via the respective outputs and the corresponding alarm LED lights up. If the release value is reached before  $t_{on}$  has elapsed, no alarm is signalled: The LEDs AL1, AL2 do not light up and no prewarning or main alarm is output. The set release time  $t_{off}$  starts when the measured value reaches the release value again after the alarm state has been triggered.


After  $t_{off}$  has elapsed, the device returns to its initial state.

If fault memory is enabled, the prewarning or main alarm is output via the LEDs until a reset is executed. A reset can be executed via the interface or the combined test/reset button (T/R).


The T/R button can also be used to test the device, switch the NFC function on and off, set write protection and configure the Modbus device address.

## Wiring diagrams

RCM410R-24

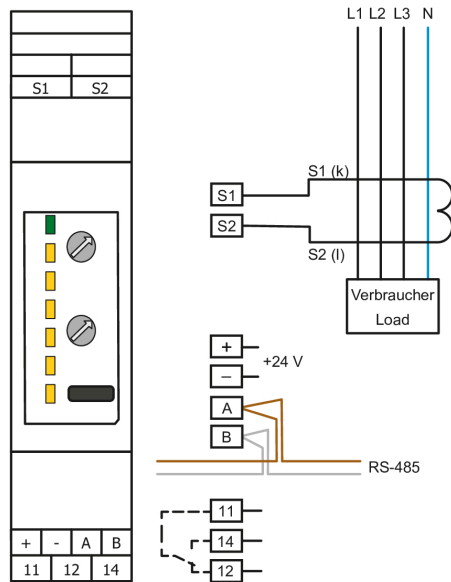

RCM410R-2

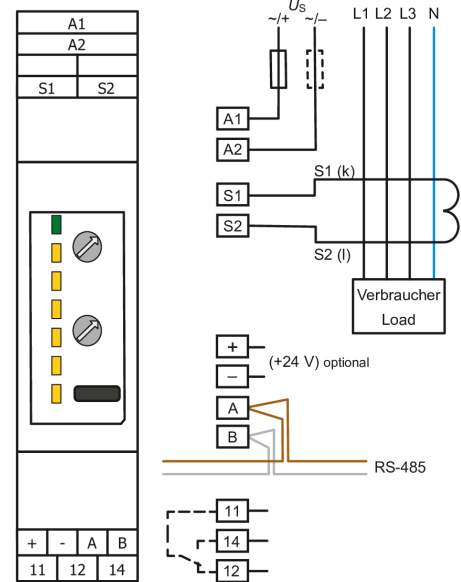

**i** For UL applications:  
The current transformers must be connected before operation.

## Connections overview

		Terminal	Connection
Top	 RCM410R-2	A1, A2	Supply voltage $U_s$
	 RCM410R-24	S1, S2	Measuring current transformer
Bottom		+	DC 24 V
		-	
		A	RS-485 A - Modbus RTU
		B	RS-485 B - Modbus RTU
		11, 14, 12	Alarm relay K1

## NFC interface



The NFC interface can be used to transmit a previously configured device parameter setting directly to the device.



*This function is available only via the Bender Connect App. You can find this app in the App-stores for iOS and Android.*



In the Bender Connect app the device first needs to be made known. Then the device-specific setting options are shown so that they can be configured. When the data is transferred, feedback is given whether the parameter configuration has been successful.

Parameter settings can be transmitted to the device via the Bender Connect app by holding the mobile phone close to the device.


To a **de-energised** device, a parameter setting can be transferred via the Bender Connect app. This setting is then activated automatically when the device is connected to the current supply.

When a device is **plugged in**, too, parameters can be configured via the Bender Connect App. To this end, the NFC interface first needs to be activated in the device.

The NFC interface is activated via the T/R button at the front of the device or via the Modbus interface.

## Dimension diagrams

Dimensions in mm

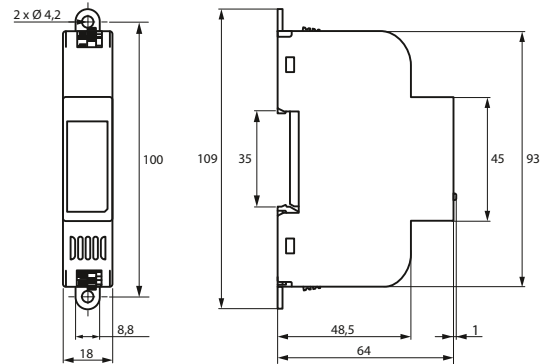

## Technical data

()\* = Factory setting

### Insulation coordination (IEC 60664-1/ IEC 60664-3)

#### RCM410R-24

##### Definitions

Measuring & control circuit (IC1)	S1, S2, +, -, A, B
Output circuit (IC2)	11, 12, 14
Rated voltage	250 V
Overvoltage category	III
Operating altitude	≤ 2000 m AMSL
Rated impulse voltage	
IC1/IC2	4 kV
Rated insulation voltage	
IC1/IC2	250 V
Pollution degree	2
Protective separation (reinforced insulation) between	
IC1/IC2	300 V
Voltage test (routine test) acc. to IEC 61010-1	
IC1/IC2	AC 2.2 kV

### Insulation coordination (IEC 60664-1/ IEC 60664-3)

#### RCM410R-2

##### Definitions

Supply circuit (IC1)	A1, A2
Output circuit (IC2)	11, 12, 14
Measuring & control circuit (IC3)	S1, S2, +, -, A, B
Rated voltage	250 V
Overvoltage category	III
Operating altitude	≤ 2000 m AMSL
Rated impulse voltage	
IC1/(IC2-3)	4 kV
IC2/IC3	4 kV
Rated insulation voltage	
IC1/(IC2-3)	250 V
IC2/IC3	250 V
Pollution degree	2
Protective separation (reinforced insulation) between	
IC1/(IC2-3)	300 V
IC2/IC3	300 V
Voltage test (routine test) acc. to IEC 61010-1	
IC1/(IC2-3)	AC 2.2 kV
IC2/IC3	AC 2.2 kV

### Supply voltage

#### RCM410R-2, RCM410R-24

Connection	+, -
Supply voltage $U_s$	DC 24 V
Tolerance of $U_s$	-30...+25 %
Power consumption	≤ 2 W
Inrush current (< 5 ms)	< 10 A

### Supply voltage

#### RCM410R-2

Connection	A1, A2
Supply voltage $U_s$	AC/DC 100...240 V (47...63 Hz)
Tolerance of $U_s$	±15 %
Power consumption	≤ 2 W / ≤ 3.5 VA
Inrush current (< 2 ms)	< 1.8 A

### Measuring circuit

Burden (internal)	33 Ω
Frequency range	42...70 Hz
Measuring current transformer monitoring <sup>1)</sup>	On/off (on)*
Measuring range (peak)	2 mA...70 A
Measuring range rms	2 mA...50 A
Rated residual operating current	30 A
Response value main alarm/ $I_{\Delta n}$ <sup>1)</sup>	10 mA...30 A (30 mA)*
Prewarning <sup>1)</sup>	50...100 % x $I_{\Delta n}$ (70 %)*
Operating uncertainty	±10 % (at 0.5...5 x $I_{\Delta n}$ )
Relative response uncertainty	6 mA...20 A: -20...0 % 20...30 A: -50...0 %
Rated thermal short-term current	2.4 kA/1 s
Hysteresis <sup>1)</sup>	10...25 % (15 %)*
Fault-memory alarm messages	On/off (on)*

<sup>1)</sup> Can only be configured via RS-485

### Measuring current transformers

Connection	CT (S1, S2)
Measuring-current transformer series, type A <sup>1)</sup>	CTAC..., CTAS..., W..., WR..., WS... series
CT connection monitoring	Yes
Rated voltage $U_n$	See technical data of the measuring current transformer
Rated surge current	6.0 kA/40 ms
Connecting cables	See technical data of the measuring current transformer
Cable lengths	
Single wire ≥ 0.75 mm <sup>2</sup>	0...1 m
Single wire, twisted ≥ 0.75 mm <sup>2</sup>	0...10 m
Shielded cable ≥ 0.75 mm <sup>2</sup>	0...40 m

<sup>1)</sup> For a selection of suitable measuring current transformers, see chapter "Measuring current transformer connection" in the manual

### Time response

Start-up delay $t$	0...900 s (0 s)*
Response delay $t_{on}$	0...10 s (0 s)*
Delay on release $t_{off}$	0...900 s (0 s)*
Operating time $t_{ae}$	
with 1 x $I_{\Delta n}$	≤ 260 ms
with 5 x $I_{\Delta n}$	40...120 ms
Response time $t_{an}$	$t_{an} = t_{ae} + t_{on}$
Recovery time $t_b$	≤ 500 ms
Response time for CT connection monitoring	≤ 10 s

### Operation

Display	Status LED incl. LED bar graph
Display range, measured value	25 / 50 / 75 / 100 %
Button T/R	Reset / test / NFC / address setting

## RS-485 interface

Connection	A, B
Protocol	Modbus RTU
Baud rate	Max. 115.2 kbits/s (19.2 kbits/s)*
Parity	even, no, odd (even)*
Stop bits	1/2/auto (auto)*
Cable length (at 9.6 kbits/s)	≤ 1200 m
Recommended lines, shield on one side connected to PE	
CAT6/CAT7	Min. AWG23
min. J-Y(St)Y 2 x 0.6 mm <sup>2</sup>	Twisted pair
Required terminating resistor	120 Ω (> 0.25 W)
Device address	1...247 (100 + last two digits of serial number)*

## NFC interface

Frequency	13.56 MHz
Transmitting power **	0 W

\*\* EMC influences may lead to communication interruptions at the NFC interface.

## Switching elements

Relay	1 changeover contact
Connection	11, 12, 14
Operating principle	N/C or N/O operation (N/C operation)*
Electrical endurance, number of cycles	10000

## Contact data acc. to IEC 60947-5-1

Utilisation category	AC-13 / AC-14 / DC-12 / DC-12 / DC-12
Rated operational voltage	230 V / 230 V / 24 V / 110 V / 220 V
Rated operational current	5 A / 3 A / 1 A / 0.2 A / 0.1 A
Minimum contact load	
Relay manufacturer's reference (Refers to relays that have not been operated with high contact currents.)	10 mA/5 V DC

## EMC/Environment

EMC	DIN EN IEC 62020-1
Operating temperature	-25...+55 °C
Transport	-40...+85 °C
Long-time storage	-40...+70 °C

## Classification of climatic conditions acc. to IEC 60721 (except condensation and formation of ice)

Stationary use (IEC 60721-3-3)	3K22
Transport (IEC 60721-3-2)	2K11
Long-term storage (IEC 60721-3-1)	1K22

## Classification of mechanical conditions acc. to IEC 60721

Stationary use (IEC 60721-3-3)	3M11
Transport (IEC 60721-3-2)	2M4
Long-term storage (IEC 60721-3-1)	1M12

## Connection

Terminals	Push-In
Connection properties	
rigid	0.2...1.5 mm <sup>2</sup> (AWG 24...16)
flexible	0.2...1.5 mm <sup>2</sup> (AWG 24...16)
with ferrule with plastic sleeve	0.25...0.75 mm <sup>2</sup>
with ferrule without plastic sleeve	0.75...1.5 mm <sup>2</sup>
(Use crimping pliers similar to CRIMPFOX 6 / Weidmüller PZ6/PZ6/5 only)	
Stripping length	8 mm

## Other

Operating mode	Continuous operation
Mounting	Vertical
Degree of protection (DIN EN 60529)	
terminals	IP20
internal components	IP30
Enclosure material	Polycarbonate
DIN rail mounting acc. to	IEC 60715
Flammability class	UL94 V-0
Weight	
RCM410R-24	≤ 60 g
RCM410R-2	≤ 70 g

## Approvals

### Standards & certifications

The RCM410R device has been developed in accordance with the following standards:

- DIN EN IEC 62020-1
- UL508
- UL1053



### Licences

For a list of the open-source software used see our [Homepage](#).

### Declaration regarding the radio system

#### EU declaration of conformity

Bender GmbH & Co. KG hereby declares that the device covered by the Radio Equipment Directive complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address:

[EU declaration of conformity \(RCM410R\)](#)

Hereby, Bender GmbH & Co. KG declares that this radio equipment complies with Radio Equipment Regulations 2017 (S.I. 2017/1206). The full text of the UK declaration of conformity is available at the following internet address:

[UKCA-Declaration of Conformity RCM410R](#)

## Ordering information

Type	Supply voltage $U_s$	Measuring current trans-formers that can be used	Art. No.
		Type A	
RCM410R-24	DC 24 V	X	B74602000
RCM410R-2	DC 24 V AC/DC 100...240 V	X	B74603000

Accessories	Art. No.
Sealable transparent cover	B80609199



**Bender GmbH & Co. KG**

Londorfer Straße 65  
35305 Grünberg  
Germany

Tel.: +49 6401 807-0  
[info@bender.de](mailto:info@bender.de)  
[www.bender.de](http://www.bender.de)



© Bender GmbH & Co. KG, Germany  
Subject to change!  
The specified standards take into account the  
edition valid until 08.2025 unless otherwise  
indicated.